





icombi™ AP21
BLUETOOTH™ STEREO ADAPTER FOR iPod

icombi™

The icombi™ adapter allows you to use an Apple® iPod® with your Oakley® O ROKR. The adapter utilizes Bluetooth® technology to stream stereo music wirelessly. It also lets you control your iPod with the buttons on O ROKR.

Please note: icombi™ requires an iPod with a dock connector. This includes the third generation iPod, the fourth generation Click Wheel iPod, iPod Photo, iPod mini, iPod nano, and the fifth generation iPod with Video. icombi works with any of these, and there is no additional software to install on the iPod.

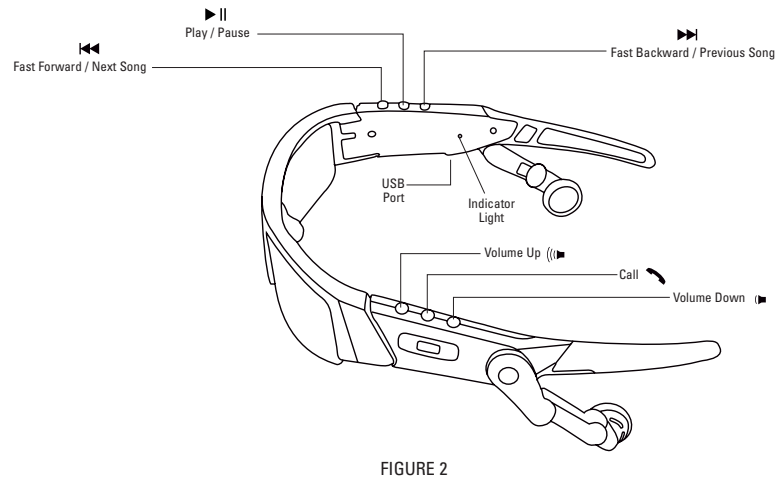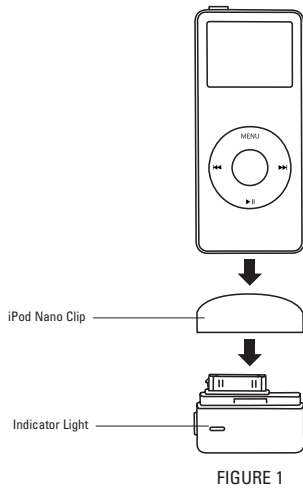

Charging

No charging is required because icombi does not contain a battery. It uses your iPod for the small amount of power that it needs, so be sure the iPod is fully charged.

Pairing

Pairing is a one-time task that allows icombi and O ROKR to recognize each other for future use.

To pair icombi with O ROKR

If you have other Bluetooth devices, be sure they are powered off before proceeding.

1. Connect icombi to the dock connector* at the bottom of your iPod. Wait 10 seconds for the blue indicator light on icombi to blink rapidly. (Figure 1)
2. With O ROKR powered off, press and hold the Call button for 7 seconds. The indicator light on O ROKR will turn solid red and pairing will occur automatically. (Figure 2)


When pairing is successful, the indicator light on O ROKR will flash green ten times and O ROKR will power on, ready for use.

After icombi and O ROKR have been successfully paired, they will automatically connect when both are powered on and placed within 33 feet (10 meters) of each other.

**Note: You will need to remove the iPod nano clip from the icombi adapter for use with your iPod or iPod mini. To remove firmly squeeze the arches on the clip together and pull it away from the icombi adapter.*

General Use







After the initial pairing, you can restore the wireless connection between O ROKR and icombi with just a few simple steps. Make sure your iPod and O ROKR are properly charged, then do the following:

1. Power on O ROKR by pressing and holding the Call  button for 3 seconds.
2. Connect icombi to the dock connector at the bottom of your iPod. (icombi and iPod will power on automatically.)

-OR-

If icombi is already connected to your iPod, simply power on and play your iPod. (icombi will not power on until the iPod has resumed playing.)

After a few moments, the light on icombi will blink every 2 seconds to indicate the wireless connection with O ROKR. You can now control your iPod wirelessly with the buttons on O ROKR.

PLAY MUSIC	Press the Play / Pause  button.
PAUSE / RESUME PLAYING	Press the Play / Pause  button.
SKIP TO NEXT SONG	Press the Fast Forward / Next Song  button.
FAST FORWARD WITHIN SONG	Press and hold the Fast Forward / Next Song  button.
PLAY PREVIOUS SONG	Press the Fast Backward / Previous Song  button.
FAST BACKWARD WITHIN SONG	Press and hold the Fast Backward / Previous Song  button.

Powering off

To power off icombi, simply remove it from the iPod. icombi will also power off automatically when the iPod is powered off.

Improving the wireless connection

The icombi adapter and O ROKR use Bluetooth wireless technology to communicate. Under typical conditions, the transmission range is up to 33 feet (10 meters). Interference from a nearby device such as a microwave oven or Wi-Fi network may affect the range of wireless music streaming. It can also be affected by an object that absorbs or reflects signals, especially if the object is between icombi and O ROKR. For best results, place icombi off the ground, away from signal absorbing materials. Changing the orientation of either device can also affect the range.

Troubleshooting

No audio is heard on O ROKR

For icombi to work properly, it must be correctly paired with O ROKR. (See section titled Pairing, for instructions in performing this one-time task.) If pairing was successful and you still can't hear music, try the following:

1. Make sure the iPod is playing and fully seated into icombi.
2. Check the volume level on both the O ROKR.
3. Make sure your iPod, icombi adapter, and O ROKR are all operating and adequately charged.
4. Verify that icombi and O ROKR are within range of each other.
5. Check the status light on icombi — it should blink at least every second to indicate a wireless connection.
6. Check the status light on O ROKR — it should blink once every three seconds to indicate a wireless connection.
7. Turn off any other Bluetooth device that could be connected to the O ROKR.
8. Disconnect the icombi from the iPod and power off the O ROKR and iPod. Reconnect the icombi to the iPod and power the O ROKR back on.
9. Plug wired earphones directly into the iPod earphone jack to verify that it is outputting audio.

Audio suddenly stops

icombi and O ROKR may be out of range from each other. The audio streaming should resume if you move back into range.

Cannot pair with O ROKR

When attempting to pair, make sure no other nearby Bluetooth devices are in pairing mode or discoverable mode, and ensure that all previously paired Bluetooth devices are powered off.

icombi powers off

If icombi powers off during use, remove it from the iPod. Be sure the iPod is powered on. Re-attach icombi to the iPod. This should power icombi back on.

Service and Support

If icombi does not function, follow the instructions under "Troubleshooting" in this manual. If icombi still does not function, see "Obtaining Warranty Service" below.

Oakley Limited Warranty

In the United States, the icombi iPod adapter is warranted against manufacturer's defects for one year from the date of purchase. Outside of the U.S., please contact your local Oakley corporate office for warranty information. Coverage is valid only with proof of purchase from an Authorized Oakley Dealer. Oakley will have the option, in its discretion, to repair or replace the defective product for the consumer. This warranty does not cover scratches. Oakley may replace or repair the product with new or reconditioned parts or product, and the replaced parts or product become the property of Oakley.

Exclusions and Limitations

Please note that this warranty does not cover defects or damages in the following situations:

- 1) after the warranty expires;
- 2) if the product was not originally purchased from an authorized Oakley dealer;
- 3) from repair services or attempts not performed by Oakley;
- 4) from normal wear and tear (i.e. scratches, abrasion of printed information, or discoloration due to UV exposure);
- 5) from fire, earthquake, flood or other natural disasters;
- 6) from alteration or disassembly of product;
- 7) from accidents, neglect, water or moisture damage, or abuse;
- 8) caused during shipment to Oakley.

THE WARRANTY AND THE REMEDIES SET FORTH ABOVE ARE EXCLUSIVE AND IN LIEU OF ALL OTHER WARRANTIES, REMEDIES AND CONDITIONS, WHETHER ORAL OR WRITTEN, EXPRESS OR IMPLIED. OAKLEY GRANTS NO OTHER EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE. THE CUSTOMER'S EXCLUSIVE REMEDY FOR A BREACH OF WARRANTY WILL BE THE REPAIR OR REPLACEMENT OF THE ITEM, AS DETERMINED BY OAKLEY IN THE EXERCISE OF ITS SOLE DISCRETION.

TO THE MAXIMUM EXTENT PERMITTED BY LAW, OAKLEY IS NOT RESPONSIBLE FOR DIRECT, SPECIAL INCIDENTAL OR CONSEQUENTIAL DAMAGES RESULTING FROM ANY BREACH OF WARRANTY OR CONDITION, OR UNDER ANY OTHER LEGAL THEORY, INCLUDING ANY COSTS OF RECOVERING OR REPRODUCING ANY DATA STORED IN OR USED WITH THE OAKLEY PRODUCT, AND ANY FAILURE TO MAINTAIN THE CONFIDENTIALITY OF DATA STORED ON THE PRODUCT.